

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

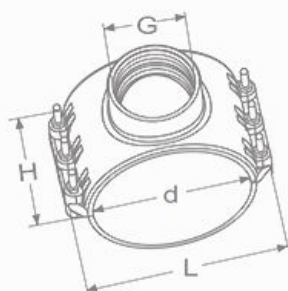

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
16	" 1/2	61	36	2 (M6x40)	10	56	B 70	02 15 2000 092
20	" 1/2	61	36	2 (M6x40)	10	61	C 200	02 15 2000 001
20	" 3/4	65	40	2 (M6x40)	10	72	C 200	02 15 2000 094
20	1 "	76	45	2 (M6x40)	10	85	C 200	02 15 2000 095
25	" 1/2	61	36	2 (M6x40)	10	62	C 200	02 15 2000 003
25	" 3/4	61	36	2 (M6x40)	10	70	C 180	02 15 2000 004
25	1 "	76	45	2 (M6x40)	10	84	C 150	02 15 2000 097
32	" 1/2	76	45	2 (M8x60)	10	130	C 100	02 15 2000 005
32	" 3/4	76	45	2 (M8x60)	10	125	C 100	02 15 2000 006
32	1 "	76	45	2 (M8x60)	10	146	C 100	02 15 2000 007
40	" 1/2	76	55	2 (M8x60)	10	134	C 100	02 15 2000 008
40	" 3/4	76	55	2 (M8x60)	10	143	C 100	02 15 2000 009
40	1 "	76	55	2 (M8x60)	10	140	C 90	02 15 2000 010
50	" 1/2	83	60	2 (M8x60)	10	150	C 80	02 15 2000 011

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

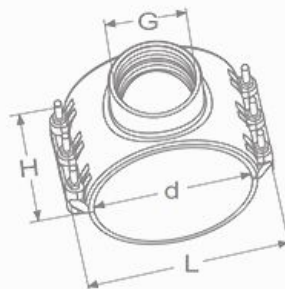

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
50	" 3/4	83	60	2 (M8x60)	10	158	C 80	02 15 2000 012
50	1 "	83	60	2 (M8x60)	10	160	C 70	02 15 2000 013
63	" 1/2	102	69	4 (M8x60)	10	255	C 50	02 15 2000 014
63	" 3/4	102	69	4 (M8x60)	10	257	C 50	02 15 2000 015
63	1 "	102	69	4 (M8x60)	10	273	C 50	02 15 2000 016
63	1" 1/4	102	69	4 (M8x60)	10	277	C 50	02 15 2000 017
63	1" 1/2	102	69	4 (M8x60)	10	299	C 45	02 15 2000 018
75	" 1/2	120	95	4 (M8x60)	10	355	C 30	02 15 2000 019
75	" 3/4	120	95	4 (M8x60)	10	358	C 30	02 15 2000 020
75	" 1	120	95	4 (M8x60)	10	368	C 30	02 15 2000 021
75	1" 1/4	120	95	4 (M8x60)	10	376	C 30	02 15 2000 022
75	1" 1/2	120	95	4 (M8x60)	10	381	C 30	02 15 2000 023
75	2"	120	95	4 (M8x60)	10	387	C 30	02 15 2000 089
90	" 1/2	132	115	6 (M8x60)	10	498	C 20	02 15 2000 024

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

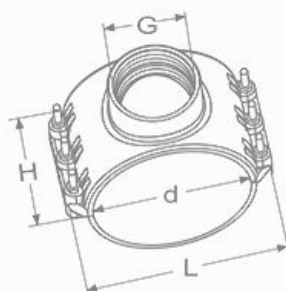

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
90	" 3/4	132	115	6 (M8x60)	10	502	C 20	02 15 2000 025
90	1 "	132	115	6 (M8x60)	10	514	C 20	02 15 2000 026
90	1" 1/4	132	115	6 (M8x60)	10	523	C 20	02 15 2000 027
90	1" 1/2	132	115	6 (M8x60)	10	530	C 20	02 15 2000 028
90	2"	132	115	6 (M8x60)	10	542	C 16	02 15 2000 090
110	" 1/2	153	129	6 (M8x60)	10	622	C 12	02 15 2000 029
110	" 3/4	153	129	6 (M8x60)	10	628	C 12	02 15 2000 030
110	1 "	153	129	6 (M8x60)	10	628	C 12	02 15 2000 031
110	1" 1/4	153	129	6 (M8x60)	10	628	C 12	02 15 2000 032
110	1" 1/2	153	129	6 (M8x60)	10	648	C 12	02 15 2000 033
110	2 "	153	129	6 (M8x60)	10	648	C 12	02 15 2000 034
125	1"	176	130	6 (M8x60)	10	675	C 12	02 15 2000 036
125	1 "1/4	176	130	6 (M8x60)	10	680	C 12	02 15 2000 037
125	1 "1/2	176	130	6 (M8x60)	10	689	C 12	02 15 2000 038

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

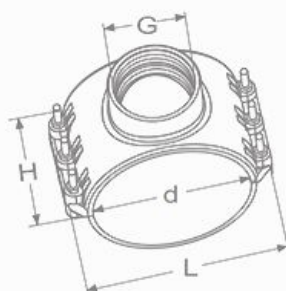

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
125	2 "	176	130	6 (M8x60)	10	685	C 12	02 15 2000 039
140	1 "	192	135	6 (M8x60)	10	800	C 10	02 15 2000 041
140	1" 1/4	192	135	6 (M8x60)	10	803	C 10	02 15 2000 042
140	1" 1/2	192	135	6 (M8x60)	10	803	C 10	02 15 2000 043
140	2 "	192	135	6 (M8x60)	10	825	C 10	02 15 2000 044
140	2" 1/2	192	135	6 (M8x60)	6	830	C 8	02 15 2000 045
140	3 "	192	135	6 (M8x60)	6	837	C 8	02 15 2000 046
160	1 "	212	135	6 (M8x60)	10	874	C 8	02 15 2000 048
160	1" 1/4	212	135	6 (M8x60)	10	878	C 8	02 15 2000 049
160	1" 1/2	212	135	6 (M8x60)	10	881	C 8	02 15 2000 050
160	2 "	212	135	6 (M8x60)	10	891	C 8	02 15 2000 051
160	3 "	212	135	6 (M8x60)	6	925	C 8	02 15 2000 053
200	1 "	252	140	6 (M8x60)	10	1010	C 6	02 15 2000 055
200	1" 1/4	252	140	6 (M8x60)	10	1040	C 6	02 15 2000 056

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

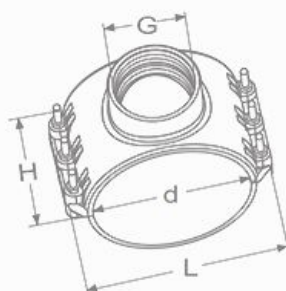

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
200	1" 1/2	252	140	6 (M8x60)	10	1046	c 6	02 15 2000 057
200	2 "	252	140	6 (M8x60)	10	1063	c 6	02 15 2000 058
200	3 "	252	140	6 (M8x60)	6	1110	c 4	02 15 2000 060
225	1" 1/4	294	170	6 (M10x80)	6	1760	c 3	02 15 2000 062
225	1 "1/2	294	170	6 (M10x80)	6	1760	c 3	02 15 2000 063
225	2 "	294	170	6 (M10x80)	6	1780	c 3	02 15 2000 064
225	2" 1/2	294	170	6 (M10x80)	4	1790	c 3	02 15 2000 065
225	3 "	294	170	6 (M10x80)	4	1750	c 3	02 15 2000 066
225	4 "	294	170	6 (M10x80)	4	1830	c 3	02 15 2000 067
250	1 " 1/4	320	180	6 (M10x80)	6	2090	c 2	02 15 2000 070
250	1" 1/2	320	180	6 (M10x80)	6	2090	c 2	02 15 2000 071
250	2 "	320	180	6 (M10x80)	6	2110	c 2	02 15 2000 072
250	2 " 1/2	320	180	6 (M10x80)	4	2110	c 2	02 15 2000 073
250	3 "	320	180	6 (M10x80)	4	2130	c 2	02 15 2000 074

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

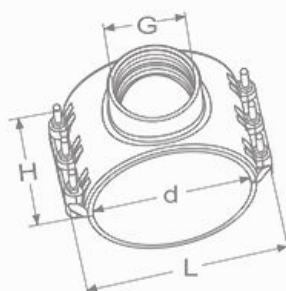

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
250	4 "	320	180	6 (M10x80)	4	2220	c 2	02 15 2000 075
315	1" 1/4	390	200	6 (M10x80)	6	2810	c 1	02 15 2000 080
315	1" 1/2	390	200	6 (M10x80)	6	2820	c 1	02 15 2000 081
315	2 "	390	200	6 (M10x80)	6	2830	c 1	02 15 2000 082
315	2" 1/2	390	200	6 (M10x80)	4	2840	c 1	02 15 2000 083
315	3 "	390	200	6 (M10x80)	4	2850	c 1	02 15 2000 084
315	4 "	390	200	6 (M10x80)	4	2880	c 1	02 15 2000 085

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

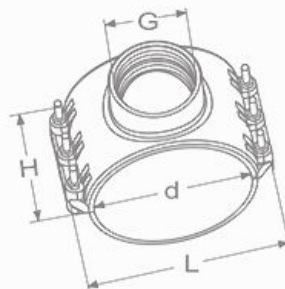

Junta

DI	W	Gr	Quant	Nº Código
13,11	2,62			40 90 8093 002
13,87	3,53			40 90 8093 006
18,64	3,53			40 90 8093 008
				40 90 8093 014
				40 90 8093 017
40,87	3,53			40 90 8093 054
53,90	3,53			40 90 8093 029
56,00	6,00			40 90 8093 112
63,09	3,53			40 90 8093 031
64,00	6,00			40 90 8093 113
65,09	3,53			40 90 8093 032
70,00	6,00			40 90 8093 114
71,44	3,53			40 90 8093 048
				40 90 8093 070