

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

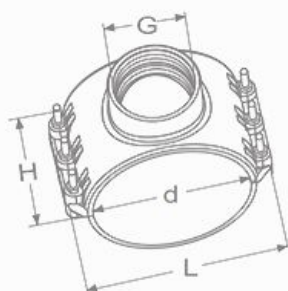

| d  | G     | L  | H  | Paraf     | PN/Bar | Gr  | Quant | Nº Código      |
|----|-------|----|----|-----------|--------|-----|-------|----------------|
| 16 | " 1/2 | 61 | 36 | 2 (M6x40) | 10     | 56  | B 70  | 02 15 2000 092 |
| 20 | " 1/2 | 61 | 36 | 2 (M6x40) | 10     | 61  | C 200 | 02 15 2000 001 |
| 20 | " 3/4 | 65 | 40 | 2 (M6x40) | 10     | 72  | C 200 | 02 15 2000 094 |
| 20 | 1 "   | 76 | 45 | 2 (M6x40) | 10     | 85  | C 200 | 02 15 2000 095 |
| 25 | " 1/2 | 61 | 36 | 2 (M6x40) | 10     | 62  | C 200 | 02 15 2000 003 |
| 25 | " 3/4 | 61 | 36 | 2 (M6x40) | 10     | 70  | C 180 | 02 15 2000 004 |
| 25 | 1 "   | 76 | 45 | 2 (M6x40) | 10     | 84  | C 150 | 02 15 2000 097 |
| 32 | " 1/2 | 76 | 45 | 2 (M8x60) | 10     | 130 | C 100 | 02 15 2000 005 |
| 32 | " 3/4 | 76 | 45 | 2 (M8x60) | 10     | 125 | C 100 | 02 15 2000 006 |
| 32 | 1 "   | 76 | 45 | 2 (M8x60) | 10     | 146 | C 100 | 02 15 2000 007 |
| 40 | " 1/2 | 76 | 55 | 2 (M8x60) | 10     | 134 | C 100 | 02 15 2000 008 |
| 40 | " 3/4 | 76 | 55 | 2 (M8x60) | 10     | 143 | C 100 | 02 15 2000 009 |
| 40 | 1 "   | 76 | 55 | 2 (M8x60) | 10     | 140 | C 90  | 02 15 2000 010 |
| 50 | " 1/2 | 83 | 60 | 2 (M8x60) | 10     | 150 | C 80  | 02 15 2000 011 |

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

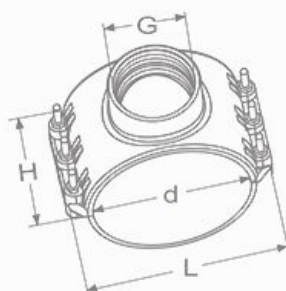

(suite)

| d  | G      | L   | H   | Paraf     | PN/Bar | Gr  | Quant | Nº Código      |
|----|--------|-----|-----|-----------|--------|-----|-------|----------------|
| 50 | " 3/4  | 83  | 60  | 2 (M8x60) | 10     | 158 | C 80  | 02 15 2000 012 |
| 50 | 1 "    | 83  | 60  | 2 (M8x60) | 10     | 160 | C 70  | 02 15 2000 013 |
| 63 | " 1/2  | 102 | 69  | 4 (M8x60) | 10     | 255 | C 50  | 02 15 2000 014 |
| 63 | " 3/4  | 102 | 69  | 4 (M8x60) | 10     | 257 | C 50  | 02 15 2000 015 |
| 63 | 1 "    | 102 | 69  | 4 (M8x60) | 10     | 273 | C 50  | 02 15 2000 016 |
| 63 | 1" 1/4 | 102 | 69  | 4 (M8x60) | 10     | 277 | C 50  | 02 15 2000 017 |
| 63 | 1" 1/2 | 102 | 69  | 4 (M8x60) | 10     | 299 | C 45  | 02 15 2000 018 |
| 75 | " 1/2  | 120 | 95  | 4 (M8x60) | 10     | 355 | C 30  | 02 15 2000 019 |
| 75 | " 3/4  | 120 | 95  | 4 (M8x60) | 10     | 358 | C 30  | 02 15 2000 020 |
| 75 | " 1    | 120 | 95  | 4 (M8x60) | 10     | 368 | C 30  | 02 15 2000 021 |
| 75 | 1" 1/4 | 120 | 95  | 4 (M8x60) | 10     | 376 | C 30  | 02 15 2000 022 |
| 75 | 1" 1/2 | 120 | 95  | 4 (M8x60) | 10     | 381 | C 30  | 02 15 2000 023 |
| 75 | 2"     | 120 | 95  | 4 (M8x60) | 10     | 387 | C 30  | 02 15 2000 089 |
| 90 | " 1/2  | 132 | 115 | 6 (M8x60) | 10     | 498 | C 20  | 02 15 2000 024 |

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

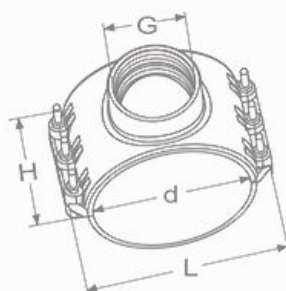

(suite)

| d   | G      | L   | H   | Paraf     | PN/Bar | Gr  | Quant | Nº Código      |
|-----|--------|-----|-----|-----------|--------|-----|-------|----------------|
| 90  | " 3/4  | 132 | 115 | 6 (M8x60) | 10     | 502 | C 20  | 02 15 2000 025 |
| 90  | 1 "    | 132 | 115 | 6 (M8x60) | 10     | 514 | C 20  | 02 15 2000 026 |
| 90  | 1" 1/4 | 132 | 115 | 6 (M8x60) | 10     | 523 | C 20  | 02 15 2000 027 |
| 90  | 1" 1/2 | 132 | 115 | 6 (M8x60) | 10     | 530 | C 20  | 02 15 2000 028 |
| 90  | 2"     | 132 | 115 | 6 (M8x60) | 10     | 542 | C 16  | 02 15 2000 090 |
| 110 | " 1/2  | 153 | 129 | 6 (M8x60) | 10     | 622 | C 12  | 02 15 2000 029 |
| 110 | " 3/4  | 153 | 129 | 6 (M8x60) | 10     | 628 | C 12  | 02 15 2000 030 |
| 110 | 1 "    | 153 | 129 | 6 (M8x60) | 10     | 628 | C 12  | 02 15 2000 031 |
| 110 | 1" 1/4 | 153 | 129 | 6 (M8x60) | 10     | 628 | C 12  | 02 15 2000 032 |
| 110 | 1" 1/2 | 153 | 129 | 6 (M8x60) | 10     | 648 | C 12  | 02 15 2000 033 |
| 110 | 2 "    | 153 | 129 | 6 (M8x60) | 10     | 648 | C 12  | 02 15 2000 034 |
| 125 | 1"     | 176 | 130 | 6 (M8x60) | 10     | 675 | C 12  | 02 15 2000 036 |
| 125 | 1 "1/4 | 176 | 130 | 6 (M8x60) | 10     | 680 | C 12  | 02 15 2000 037 |
| 125 | 1 "1/2 | 176 | 130 | 6 (M8x60) | 10     | 689 | C 12  | 02 15 2000 038 |

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

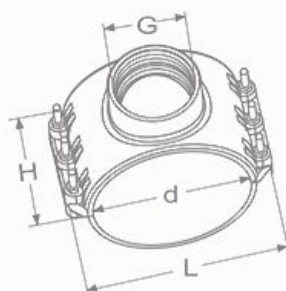

(suite)

| d   | G      | L   | H   | Paraf     | PN/Bar | Gr   | Quant | Nº Código      |
|-----|--------|-----|-----|-----------|--------|------|-------|----------------|
| 125 | 2 "    | 176 | 130 | 6 (M8x60) | 10     | 685  | C 12  | 02 15 2000 039 |
| 140 | 1 "    | 192 | 135 | 6 (M8x60) | 10     | 800  | C 10  | 02 15 2000 041 |
| 140 | 1" 1/4 | 192 | 135 | 6 (M8x60) | 10     | 803  | C 10  | 02 15 2000 042 |
| 140 | 1" 1/2 | 192 | 135 | 6 (M8x60) | 10     | 803  | C 10  | 02 15 2000 043 |
| 140 | 2 "    | 192 | 135 | 6 (M8x60) | 10     | 825  | C 10  | 02 15 2000 044 |
| 140 | 2" 1/2 | 192 | 135 | 6 (M8x60) | 6      | 830  | C 8   | 02 15 2000 045 |
| 140 | 3 "    | 192 | 135 | 6 (M8x60) | 6      | 837  | C 8   | 02 15 2000 046 |
| 160 | 1 "    | 212 | 135 | 6 (M8x60) | 10     | 874  | C 8   | 02 15 2000 048 |
| 160 | 1" 1/4 | 212 | 135 | 6 (M8x60) | 10     | 878  | C 8   | 02 15 2000 049 |
| 160 | 1" 1/2 | 212 | 135 | 6 (M8x60) | 10     | 881  | C 8   | 02 15 2000 050 |
| 160 | 2 "    | 212 | 135 | 6 (M8x60) | 10     | 891  | C 8   | 02 15 2000 051 |
| 160 | 3 "    | 212 | 135 | 6 (M8x60) | 6      | 925  | C 8   | 02 15 2000 053 |
| 200 | 1 "    | 252 | 140 | 6 (M8x60) | 10     | 1010 | C 6   | 02 15 2000 055 |
| 200 | 1" 1/4 | 252 | 140 | 6 (M8x60) | 10     | 1040 | C 6   | 02 15 2000 056 |

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

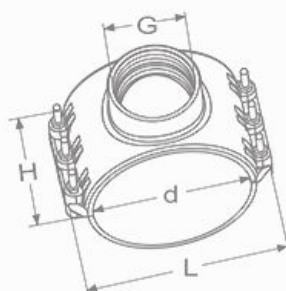

(suite)

| d   | G       | L   | H   | Paraf      | PN/Bar | Gr   | Quant | Nº Código      |
|-----|---------|-----|-----|------------|--------|------|-------|----------------|
| 200 | 1" 1/2  | 252 | 140 | 6 (M8x60)  | 10     | 1046 | c 6   | 02 15 2000 057 |
| 200 | 2 "     | 252 | 140 | 6 (M8x60)  | 10     | 1063 | c 6   | 02 15 2000 058 |
| 200 | 3 "     | 252 | 140 | 6 (M8x60)  | 6      | 1110 | c 4   | 02 15 2000 060 |
| 225 | 1" 1/4  | 294 | 170 | 6 (M10x80) | 6      | 1760 | c 3   | 02 15 2000 062 |
| 225 | 1 "1/2  | 294 | 170 | 6 (M10x80) | 6      | 1760 | c 3   | 02 15 2000 063 |
| 225 | 2 "     | 294 | 170 | 6 (M10x80) | 6      | 1780 | c 3   | 02 15 2000 064 |
| 225 | 2" 1/2  | 294 | 170 | 6 (M10x80) | 4      | 1790 | c 3   | 02 15 2000 065 |
| 225 | 3 "     | 294 | 170 | 6 (M10x80) | 4      | 1750 | c 3   | 02 15 2000 066 |
| 225 | 4 "     | 294 | 170 | 6 (M10x80) | 4      | 1830 | c 3   | 02 15 2000 067 |
| 250 | 1 " 1/4 | 320 | 180 | 6 (M10x80) | 6      | 2090 | c 2   | 02 15 2000 070 |
| 250 | 1" 1/2  | 320 | 180 | 6 (M10x80) | 6      | 2090 | c 2   | 02 15 2000 071 |
| 250 | 2 "     | 320 | 180 | 6 (M10x80) | 6      | 2110 | c 2   | 02 15 2000 072 |
| 250 | 2 " 1/2 | 320 | 180 | 6 (M10x80) | 4      | 2110 | c 2   | 02 15 2000 073 |
| 250 | 3 "     | 320 | 180 | 6 (M10x80) | 4      | 2130 | c 2   | 02 15 2000 074 |

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

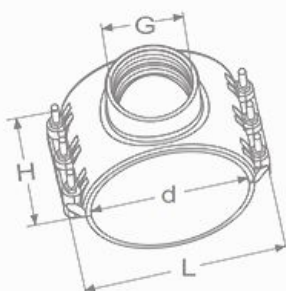

(suite)

| d   | G      | L   | H   | Paraf      | PN/Bar | Gr   | Quant | Nº Código      |
|-----|--------|-----|-----|------------|--------|------|-------|----------------|
| 250 | 4 "    | 320 | 180 | 6 (M10x80) | 4      | 2220 | c 2   | 02 15 2000 075 |
| 315 | 1" 1/4 | 390 | 200 | 6 (M10x80) | 6      | 2810 | c 1   | 02 15 2000 080 |
| 315 | 1" 1/2 | 390 | 200 | 6 (M10x80) | 6      | 2820 | c 1   | 02 15 2000 081 |
| 315 | 2 "    | 390 | 200 | 6 (M10x80) | 6      | 2830 | c 1   | 02 15 2000 082 |
| 315 | 2" 1/2 | 390 | 200 | 6 (M10x80) | 4      | 2840 | c 1   | 02 15 2000 083 |
| 315 | 3 "    | 390 | 200 | 6 (M10x80) | 4      | 2850 | c 1   | 02 15 2000 084 |
| 315 | 4 "    | 390 | 200 | 6 (M10x80) | 4      | 2880 | c 1   | 02 15 2000 085 |

Braçadeira roscada c/ reforço


Clamp saddle with reinforce

Collier de prise en charge avec renfor

Collarine de toma con refuerzo



02 15 2000 000

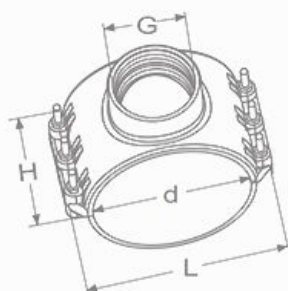

Joint torique

| DI    | W    | Gr | Quant | Nº Código      |
|-------|------|----|-------|----------------|
| 13,11 | 2,62 |    |       | 40 90 8093 002 |
| 13,87 | 3,53 |    |       | 40 90 8093 006 |
| 18,64 | 3,53 |    |       | 40 90 8093 008 |
|       |      |    |       | 40 90 8093 014 |
|       |      |    |       | 40 90 8093 017 |
| 40,87 | 3,53 |    |       | 40 90 8093 054 |
| 53,90 | 3,53 |    |       | 40 90 8093 029 |
| 56,00 | 6,00 |    |       | 40 90 8093 112 |
| 63,09 | 3,53 |    |       | 40 90 8093 031 |
| 64,00 | 6,00 |    |       | 40 90 8093 113 |
| 65,09 | 3,53 |    |       | 40 90 8093 032 |
| 70,00 | 6,00 |    |       | 40 90 8093 114 |
| 71,44 | 3,53 |    |       | 40 90 8093 048 |
|       |      |    |       | 40 90 8093 070 |