

Braçadeira roscada s/ reforço


Clamp saddle without reinforce

Collier de prise en charge sans renfor

Collarine de toma sin refuerzo



02 15 2001 000

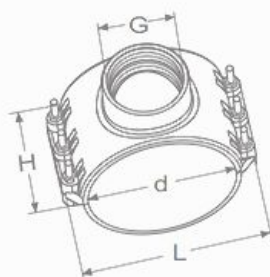

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
16	" 3/8	61	36	2 (M6x40)	10	56	B 70	02 15 2001 091
16	" 1/2	76	55	2 (M6x40)	10	56	B 70	02 15 2001 092
20	" 3/8	61	36	2 (M6x40)	10	65	C 200	02 15 2001 093
20	" 1/2	61	36	2 (M6x40)	10	56	C 200	02 15 2001 001
20	" 3/4	65	40	2 (M6x40)	10	65	C 200	02 15 2001 094
20	1"	76	45	2 (M6x40)	10	76	C 200	02 15 2001 095
25	" 3/8	61	36	2 (M6x40)	10	55	C 200	02 15 2001 096
25	" 1/2	61	36	2 (M6x40)	10	55	C 200	02 15 2001 003
25	" 3/4	61	36	2 (M6x40)	10	63	C 180	02 15 2001 004
25	1"	76	45	2 (M6x40)	10	75	C 150	02 15 2001 097
32	" 1/2	76	45	2 (M8x60)	10	123	C 100	02 15 2001 005
32	" 3/4	76	45	2 (M8x60)	10	120	C 100	02 15 2001 006
32	1 "	76	45	2 (M8x60)	10	139	C 100	02 15 2001 007
40	" 1/2	76	55	2 (M8x60)	10	127	C 100	02 15 2001 008

Braçadeira roscada s/ reforço


Clamp saddle without reinforce

Collier de prise en charge sans renfor

Collarine de toma sin refuerzo



02 15 2001 000

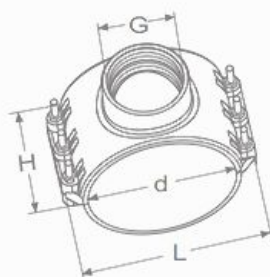

(continued)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
40	" 3/4	76	55	2 (M8x60)	10	136	C 100	02 15 2001 009
40	1 "	76	55	2 (M8x60)	10	130	C 90	02 15 2001 010
50	" 1/2	83	60	2 (M8x60)	10	143	C 80	02 15 2001 011
50	" 3/4	83	60	2 (M8x60)	10	151	C 80	02 15 2001 012
50	1 "	83	60	2 (M8x60)	10	150	C 70	02 15 2001 013
63	" 1/2	102	69	4 (M8x60)	10	250	C 50	02 15 2001 014
63	" 3/4	102	69	4 (M8x60)	10	250	C 50	02 15 2001 015
63	1 "	102	69	4 (M8x60)	10	263	C 50	02 15 2001 016
63	1" 1/4	102	69	4 (M8x60)	10	267	C 50	02 15 2001 017
63	1" 1/2	102	69	4 (M8x60)	10	290	C 45	02 15 2001 018
75	" 1/2	120	95	4 (M8x60)	10	348	C 30	02 15 2001 019
75	" 3/4	120	95	4 (M8x60)	10	350	C 30	02 15 2001 020
75	1 "	120	95	4 (M8x60)	10	358	C 30	02 15 2001 021
75	1" 1/4	120	95	4 (M8x60)	10	368	C 30	02 15 2001 022

Braçadeira roscada s/ reforço


Clamp saddle without reinforce

Collier de prise en charge sans renfor

Collarine de toma sin refuerzo



02 15 2001 000

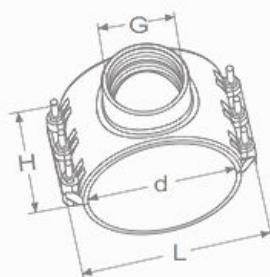

(continued)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
75	1" 1/2	120	95	4 (M8x60)	10	371	C 30	02 15 2001 023
75	2"	120	95	4 (M8x60)	10	372	C 30	02 15 2001 089
90	" 1/2	132	115	6 (M8x60)	10	490	C 20	02 15 2001 024
90	" 3/4	132	115	6 (M8x60)	10	495	C 20	02 15 2001 025
90	1 "	132	115	6 (M8x60)	10	504	C 20	02 15 2001 026
90	1" 1/4	132	115	6 (M8x60)	10	513	C 20	02 15 2001 027
90	1" 1/2	132	115	6 (M8x60)	10	520	C 20	02 15 2001 028
90	2"	132	115	6 (M8x60)	10	520	C 16	02 15 2001 090
110	" 1/2	153	129	6 (M8x60)	10	612	C 12	02 15 2001 029
110	" 3/4	153	129	6 (M8x60)	10	618	C 12	02 15 2001 030
110	1 "	153	129	6 (M8x60)	10	618	C 12	02 15 2001 031
110	1" 1/4	153	129	6 (M8x60)	10	620	C 12	02 15 2001 032
110	1" 1/2	153	129	6 (M8x60)	10	638	C 12	02 15 2001 033
110	2 "	153	129	6 (M8x60)	10	638	C 12	02 15 2001 034

Braçadeira roscada s/ reforço


Clamp saddle without reinforce

Collier de prise en charge sans renfor

Collarine de toma sin refuerzo



02 15 2001 000

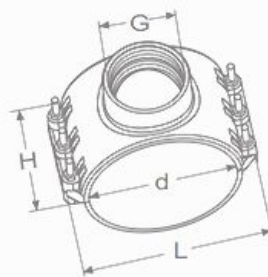

(continued)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
125	1"	176	130	6 (M8x60)	10	665	C 12	02 15 2001 036
125	1 "1/4	176	130	6 (M8x60)	10	680	C 12	02 15 2001 037
125	1 "1/2	176	130	6 (M8x60)	10	680	C 12	02 15 2001 038
125	2 "	176	130	6 (M8x60)	10	680	C 12	02 15 2001 039

Braçadeira roscada s/ reforço


Clamp saddle without reinforce

Collier de prise en charge sans renfor

Collarine de toma sin refuerzo



02 15 2001 000

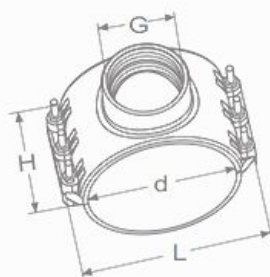

«O» ring gasket

DI	W	Gr	Quant	Nº Código
13.11	2.62			40 90 8093 002
13.87	3.53			40 90 8093 006
18.64	3.53			40 90 8093 008
				40 90 8093 014
				40 90 8093 017
40.87	3.53			40 90 8093 054
53.90	3.53			40 90 8093 029
63.09	3.53			40 90 8093 031
65.09	3.53			40 90 8093 032