

Braçadeira roscada c/ reforço NPT


Clamp saddle with reinforce NPT

Collier de prise en charge avec renfor NPT

Collarine de toma con refuerzo NPT



02 15 2704 000

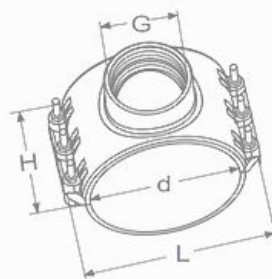

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
25	" 1/2	61	36	2 (M6x40)	10	62	C 200	02 15 2704 003
25	" 3/4	61	36	2 (M6x40)	10	70	C 180	02 15 2704 004
32	" 1/2	76	45	2 (M8x60)	10	130	C 100	02 15 2704 005
32	" 3/4	76	45	2 (M8x60)	10	137	C 100	02 15 2704 006
32	1 "	76	45	2 (M8x60)	10	146	C 100	02 15 2704 007
40	" 1/2	76	55	2 (M8x60)	10	134	C 100	02 15 2704 008
40	" 3/4	76	55	2 (M8x60)	10	143	C 100	02 15 2704 009
40	1 "	76	55	2 (M8x60)	10	130	C 90	02 15 2704 010
50	" 1/2	83	60	2 (M8x60)	10	150	C 80	02 15 2704 011
50	" 3/4	83	60	2 (M8x60)	10	158	C 80	02 15 2704 012
50	1 "	83	60	2 (M8x60)	10	166	C 70	02 15 2704 013
63	" 1/2	102	69	4 (M8x60)	10	255	C 50	02 15 2704 014
63	" 3/4	102	69	4 (M8x60)	10	257	C 50	02 15 2704 015
63	1 "	102	69	4 (M8x60)	10	273	C 50	02 15 2704 016

Braçadeira roscada c/ reforço NPT


Clamp saddle with reinforce NPT

Collier de prise en charge avec renfor NPT

Collarine de toma con refuerzo NPT



02 15 2704 000

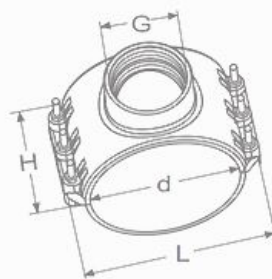

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
63	1" 1/4	102	69	4 (M8x60)	10	277	C 50	02 15 2704 017
63	1" 1/2	102	69	4 (M8x60)	10	299	C 45	02 15 2704 018
75	" 1/2	120	95	4 (M8x60)	10	355	C 30	02 15 2704 019
75	" 3/4	120	95	4 (M8x60)	10	358	C 30	02 15 2704 020
75	1 "	120	95	4 (M8x60)	10	368	C 30	02 15 2704 021
75	1" 1/2	120	95	4 (M8x60)	10	381	C 30	02 15 2704 023
90	" 1/2	132	115	6 (M8x60)	10	498	C 20	02 15 2704 024
90	" 3/4	132	115	6 (M8x60)	10	502	C 20	02 15 2704 025
90	1 "	132	115	6 (M8x60)	10	514	C 20	02 15 2704 026
90	1" 1/4	132	115	6 (M8x60)	10	523	C 20	02 15 2704 027
90	1" 1/2	132	115	6 (M8x60)	10	530	C 20	02 15 2704 028
110	" 1/2	153	129	6 (M8x60)	10	622	C 12	02 15 2704 029
110	" 3/4	153	129	6 (M8x60)	10	628	C 12	02 15 2704 030
110	1 "	153	129	6 (M8x60)	10	628	C 12	02 15 2704 031

Braçadeira roscada c/ reforço NPT


Clamp saddle with reinforce NPT

Collier de prise en charge avec renfor NPT

Collarine de toma con refuerzo NPT



02 15 2704 000

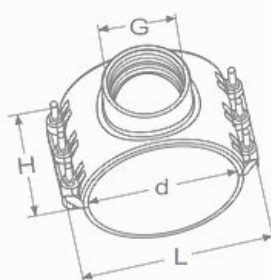

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
110	1" 1/4	153	129	6 (M8x60)	10	628	C 12	02 15 2704 032
110	1" 1/2	153	129	6 (M8x60)	10	648	C 12	02 15 2704 033
110	2 "	153	129	6 (M8x60)	10	648	C 12	02 15 2704 034
125	1"	176	130	6 (M8x60)	10	675	C 12	02 15 2704 036
125	1 "1/4	176	130	6 (M8x60)	10	680	C 12	02 15 2704 037
125	1 "1/2	176	130	6 (M8x60)	10	689	C 12	02 15 2704 038
125	2 "	176	130	6 (M8x60)	10	685	C 12	02 15 2704 039
140	1 "	192	135	6 (M8x60)	10	800	C 10	02 15 2704 041
140	1" 1/4	192	135	6 (M8x60)	10	803	C 10	02 15 2704 042
140	1" 1/2	192	135	6 (M8x60)	10	803	C 10	02 15 2704 043
140	2 "	192	135	6 (M8x60)	10	825	C 10	02 15 2704 044
140	2" 1/2	192	135	6 (M8x60)	6	830	C 8	02 15 2704 045
140	3 "	192	135	6 (M8x60)	6	837	C 8	02 15 2704 046
160	1 "	212	135	6 (M8x60)	10	874	C 8	02 15 2704 048

Braçadeira roscada c/ reforço NPT


Clamp saddle with reinforce NPT

Collier de prise en charge avec renfor NPT

Collarine de toma con refuerzo NPT



02 15 2704 000

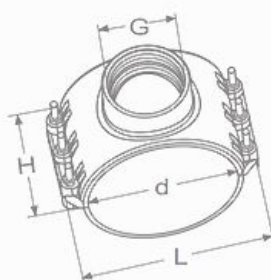

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
160	1" 1/4	212	135	6 (M8x60)	10	878	c 8	02 15 2704 049
160	1" 1/2	212	135	6 (M8x60)	10	881	c 8	02 15 2704 050
160	2 "	212	135	6 (M8x60)	10	891	c 8	02 15 2704 051
160	3 "	212	135	6 (M8x60)	6	925	c 8	02 15 2704 053
200	1 "	252	140	6 (M8x60)	10	1010	c 6	02 15 2704 055
200	1" 1/2	252	140	6 (M8x60)	10	1046	c 6	02 15 2704 057
200	2 "	252	140	6 (M8x60)	10	1063	c 6	02 15 2704 058
200	3 "	252	140	6 (M8x60)	6	1110	c 4	02 15 2704 060
225	1" 1/4	294	170	6 (M10x80)	6	1760	c 3	02 15 2704 062
225	1 "1/2	294	170	6 (M10x80)	6	1760	c 3	02 15 2704 063
225	2 "	294	170	6 (M10x80)	6	1780	c 3	02 15 2704 064
225	2" 1/2	294	170	6 (M10x80)	4	1790	c 3	02 15 2704 065
225	3 "	294	170	6 (M10x80)	4	1750	c 3	02 15 2704 066
225	4 "	294	170	6 (M10x80)	4	1830	c 3	02 15 2704 067

Braçadeira roscada c/ reforço NPT


Clamp saddle with reinforce NPT

Collier de prise en charge avec renfor NPT

Collarine de toma con refuerzo NPT



02 15 2704 000

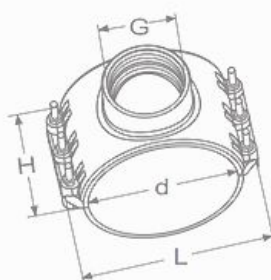

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
250	1 " 1/4	320	180	6 (M10x80)	6	2090	c 2	02 15 2704 070
250	1" 1/2	320	180	6 (M10x80)	6	2090	c 2	02 15 2704 071
250	2 "	320	180	6 (M10x80)	6	2110	c 2	02 15 2704 072
250	2 " 1/2	320	180	6 (M10x80)	4	2110	c 2	02 15 2704 073
250	3 "	320	180	6 (M10x80)	4	2130	c 2	02 15 2704 074
250	4 "	320	180	6 (M10x80)	4	2220	c 2	02 15 2704 075
315	1" 1/4	390	200	6 (M10x80)	6	2810	c 1	02 15 2704 080
315	1" 1/2	390	200	6 (M10x80)	6	2820	c 1	02 15 2704 081
315	2 "	390	200	6 (M10x80)	6	2830	c 1	02 15 2704 082
315	2" 1/2	390	200	6 (M10x80)	4	2840	c 1	02 15 2704 083
315	3 "	390	200	6 (M10x80)	4	2850	c 1	02 15 2704 084
315	4 "	390	200	6 (M10x80)	4	2880	c 1	02 15 2704 085

Braçadeira roscada c/ reforço NPT


Clamp saddle with reinforce NPT

Collier de prise en charge avec renfor NPT

Collarine de toma con refuerzo NPT



02 15 2704 000

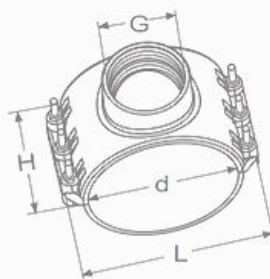

Junta

DI	W	Gr	Quant	Nº Código
13,11	2,62			40 90 8093 002
13,87	3,53			40 90 8093 006
18,64	3,53			40 90 8093 008
				40 90 8093 014
				40 90 8093 017
40,87	3,53			40 90 8093 054
53,90	3,53			40 90 8093 029
56,00	6,00			40 90 8093 112
63,09	3,53			40 90 8093 031
64,00	6,00			40 90 8093 113
65,09	3,53			40 90 8093 032
70,00	6,00			40 90 8093 114
71,44	3,53			40 90 8093 048
				40 90 8093 070