

Braçadeira roscada s/ reforço NPT


Clamp saddle without reinforce NPT

Collier de prise en charge sans renfor NPT

Collarine de toma sin refuerzo NPT



02 15 2705 000

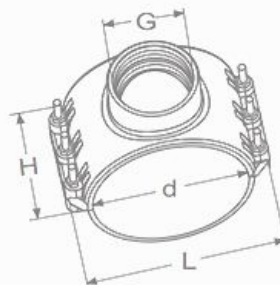

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
25	" 1/2	61	36	2 (M6x40)	10	55	C 200	02 15 2705 003
25	" 3/4	61	36	2 (M6x40)	10	63	C 180	02 15 2705 004
32	" 1/2	76	45	2 (M8x60)	10	123	C 100	02 15 2705 005
32	" 3/4	76	45	2 (M8x60)	10	130	C 100	02 15 2705 006
32	1 "	76	45	2 (M8x60)	10	139	C 100	02 15 2705 007
40	" 1/2	76	55	2 (M8x60)	10	127	C 100	02 15 2705 008
40	" 3/4	76	55	2 (M8x60)	10	136	C 100	02 15 2705 009
40	1 "	76	55	2 (M8x60)	10	120	C 90	02 15 2705 010
50	" 1/2	83	60	2 (M8x60)	10	143	C 80	02 15 2705 011
50	" 3/4	83	60	2 (M8x60)	10	151	C 80	02 15 2705 012
50	1 "	83	60	2 (M8x60)	10	156	C 70	02 15 2705 013
63	" 1/2	102	69	4 (M8x60)	10	250	C 50	02 15 2705 014
63	" 3/4	102	69	4 (M8x60)	10	250	C 50	02 15 2705 015
63	1 "	102	69	4 (M8x60)	10	263	C 50	02 15 2705 016

Braçadeira roscada s/ reforço NPT


Clamp saddle without reinforce NPT

Collier de prise en charge sans renfor NPT

Collarine de toma sin refuerzo NPT



02 15 2705 000

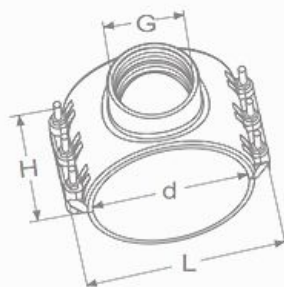

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
63	1" 1/4	102	69	4 (M8x60)	10	267	C 50	02 15 2705 017
63	1" 1/2	102	69	4 (M8x60)	10	290	C 45	02 15 2705 018
75	" 1/2	120	95	4 (M8x60)	10	348	C 30	02 15 2705 019
75	" 3/4	120	95	4 (M8x60)	10	350	C 30	02 15 2705 020
75	1 "	120	95	4 (M8x60)	10	358	C 30	02 15 2705 021
75	1" 1/2	120	95	4 (M8x60)	10	371	C 30	02 15 2705 023
90	" 1/2	132	115	6 (M8x60)	10	490	C 20	02 15 2705 024
90	" 3/4	132	115	6 (M8x60)	10	495	C 20	02 15 2705 025
90	1 "	132	115	6 (M8x60)	10	504	C 20	02 15 2705 026
90	1" 1/4	132	115	6 (M8x60)	10	513	C 20	02 15 2705 027
90	1" 1/2	132	115	6 (M8x60)	10	520	C 20	02 15 2705 028
110	" 1/2	153	129	6 (M8x60)	10	612	C 12	02 15 2705 029
110	" 3/4	153	129	6 (M8x60)	10	618	C 12	02 15 2705 030
110	1 "	153	129	6 (M8x60)	10	618	C 12	02 15 2705 031

Braçadeira roscada s/ reforço NPT


Clamp saddle without reinforce NPT

Collier de prise en charge sans renfor NPT

Collarine de toma sin refuerzo NPT



02 15 2705 000

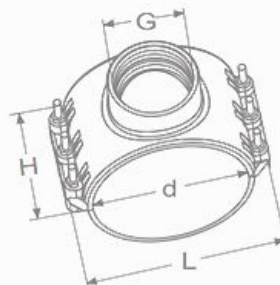

(continuación)

d	G	L	H	Paraf	PN/Bar	Gr	Quant	Nº Código
110	1" 1/4	153	129	6 (M8x60)	10	620	C 12	02 15 2705 032
110	1" 1/2	153	129	6 (M8x60)	10	638	C 12	02 15 2705 033
110	2 "	153	129	6 (M8x60)	10	638	C 12	02 15 2705 034
125	1"	176	130	6 (M8x60)	10	665	C 12	02 15 2705 036
125	1 "1/4	176	130	6 (M8x60)	10	680	C 12	02 15 2705 037
125	1 "1/2	176	130	6 (M8x60)	10	680	C 12	02 15 2705 038
125	2 "	176	130	6 (M8x60)	10	680	C 12	02 15 2705 039

Braçadeira roscada s/ reforço NPT


Clamp saddle without reinforce NPT

Collier de prise en charge sans renfor NPT

Collarine de toma sin refuerzo NPT



02 15 2705 000

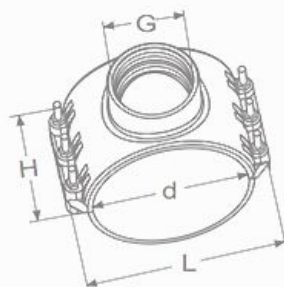

Junta

DI	W	Gr	Quant	Nº Código
13,11	2,62			40 90 8093 002
13,87	3,53			40 90 8093 006
18,64	3,53			40 90 8093 008
				40 90 8093 014
				40 90 8093 017
40,87	3,53			40 90 8093 054
53,90	3,53			40 90 8093 029
63,09	3,53			40 90 8093 031
65,09	3,53			40 90 8093 032
71,44	3,53			40 90 8093 048